


# DMX DC Signal Generator

## Operation Panel

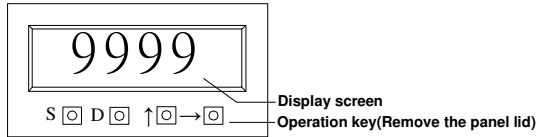

## Keys

Key	Function	Instruction
S	Enter key	Enter setting mode
D	Confirm key	Confirm setting
↑	Change number	Change number
→	Change position	Change position

## Parameter Setting

Press "S" to enter function option: 01、02、03、04、05、07、08、09.

Press "↑" and "→" to set parameter.

	Function	Instruction	Note
01	XXXXXXXX	No need to set Press "S" to enter 02.	
02	Output corresponding value (Minimum)	Press "↑" and "→" to set the minimum value Press "D" to enter 03	EX. Output : DC 4~20mA Display: 4.00~20.00mA Set 02 as 400.
03	Output corresponding value (Maximum)	Press "↑" and "→" to set the maximum value Press "D" to enter 04	EX. Output: DC 4~20mA Display: 4.00~20.00mA Set 03 as 2000
04	Decimal point setting	Press "→" to choose decimal point position. Press "D" to enter 05.	Pay attention to the change. 88.88
05	XXXXXXXX	No need to set Press "S" to enter 06	
06	XXXXXXXX	No need to set Press "S" to enter 07.	
07	XXXXXXXX	No need to set Press "S" to enter 08.	
08	XXXXXXXX	No need to set Press "S" to enter 09.	
09	Save	Press "D" to enter 99 mode. Press "D" to save.	Setting will be effective after keying in 99.

## Example

OUTPUT : DC 4 ~ 20mA

DISPLAY RANGE : DC 4.00 ~ 20.00mA

### Setting procedures are as the following:

- Step 1. Press S to enter setting mode. "0 0" blinks. Press D to enter 02.
- Step 2. Press "↑" "→" to set 02 as 0400. Press "D" to enter 03.
- Step 3. Press "↑" "→" to set 03 as 2000. Press "D" to enter 04.
- Step 4. Press "→" to set 04 as 88.88. Press "S" to enter 09
- Step 5. Enter 09 to save setting. Press "D" to enter 99. Press D to confirm setting.